ARAT Telephone mount

Type: Chrysler Cherokee Jeep
Model 1996 - 2001

Part No: 1253

ARAT GmbH
Spezialhalterungen
für Autotelefone u.-Navigationssysteme

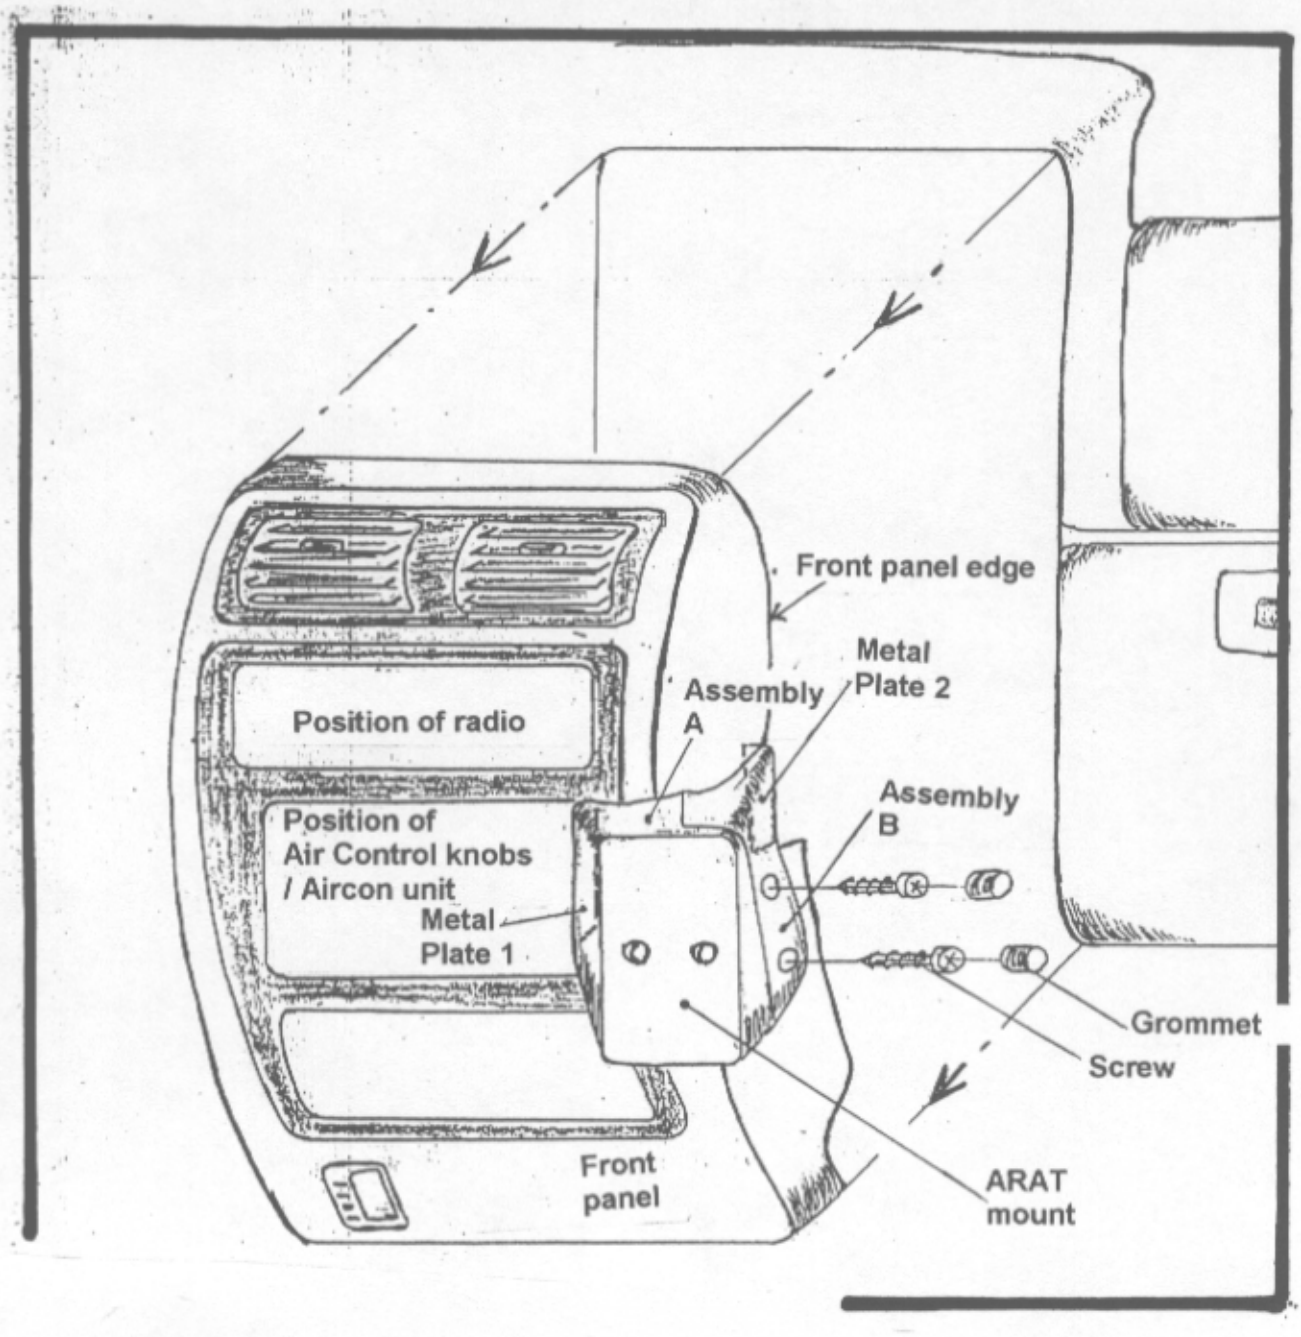

Installation instruction

1. Remove the front panel, (it is only a press fit on spring clips)
2. Place assembly A into the panel, and slide the metal plate 1 into the air controls/aircon side between the panel
3. Place assembly 2 of the ARAT mount onto the side of the panel and clip the metal plate behind the panel lip (see above)
4. With the supplied screws 4 x 35 are screwed through assembly 2 into the side of assembly 1, place the grommets over the screw heads
5. Replace the front panel